

# Produktübersicht APS Störmeldesysteme

	 Voice agent	 TS 400	 RMC	 LSA	 LSB 04/08	 LSC	 LSE	 AS 1200	 AS 5000	
Fronteinbau		●				●	●		●	<b>Montage</b> ● = OK ● = Einzelne Komponenten ● = mit Zubehör
DIN-Hutschiene	●	●		●	●	●		●		
Aufbau-Montage	●			●		●				
19" Rack	●		●			●				
LED-Anzeige			●	●	●	●	●		●	<b>Kommunikation</b> ● = OK ● = Versionsabhängig
Horn (integriert)	●	●	●			●	●	●	●	
Relaiskontakt	●	●	●	●	●	●	●	●	●	
Textanzeige	●	●	●							
Grafikanzeige		●								
SMS-Versand	●	●	●							
E-Mail-Versand	●	●	●							
Sprachmeldung absetzen	●	●								
Pagermeldung absetzen	●	●								
SNMP Traps versenden		●	●							
ESPA Protokollverarbeitung		●								
SIA DC-09 CID Protokoll	●	●								
MODBUS Master/Slave		●								
ATAS/CSTA		●								
KNX		●								
Betriebs-Störmelder		●					●			
Neuwert-/Erstwert- melder	●	●	●	●		●	●		●	
Sammelmelder				●	●		●	●		
Anzeigebaustein							●			
Störmeldeeingänge Grundausbau	64	8	12	8	4/8	8	16	12	16/32	<b>Anzahl Eingänge</b>
Maximalausbau Eingänge	16	unbegr.	12	256	256	64	320	12	32	